

# NuTone®

## Two Year Limited Warranty

**WARRANTY OWNER:** NuTone warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of two (2) years from the date of original purchase. **THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

**During this two year period,** NuTone will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service. **THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS OR TUBES.** This warranty does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by NuTone), faulty installation or installation contrary to recommended installation instructions.

The duration of any implied warranty is limited to the two year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

**NUTONE'S OBLIGATION TO REPAIR OR REPLACE, AT NUTONE'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. NUTONE SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE.** Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties.

**WARRANTY SERVICE:** To qualify for warranty service, you must (a) notify NuTone at the address stated below or telephone 1/800-543-8687, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

\_\_\_\_\_  
Date of Installation

\_\_\_\_\_  
Builder or Installer

\_\_\_\_\_  
Model No. and Product Description

### IF YOU NEED ASSISTANCE OR SERVICE:

For the location of your nearest NuTone Independent Authorized Service Center:

**Residents of the contiguous United States** Dial Free 1-800-543-8687

Please be prepared to provide:

Product model number • Date and Proof of purchase • The nature of the difficulty

**Residents of Alaska or Hawaii should write to:** NuTone Inc. Attn: Department of National Field Service, 4820 Red Bank Road, Cincinnati Ohio 45227-1599.

**Residents of Canada should write to:** Broan-NuTone Canada, 1140 Tristar Drive, Mississauga, Ontario, Canada L5T 1H9.

Rev. 03/2001

# NuTone®

## BUILT-IN CENTRAL CLEANING SYSTEM



For Models CV450,  
CV353 & CV350

MODEL CV-350 SHOWN

## HOMEOWNERS OPERATING INSTRUCTIONS

Product specifications subject to change without notice.

4820 Red Bank Road, Cincinnati, Ohio 45227  
Printed in U.S.A., Rev. 4/01, Part No. 35866





## BAG REPLACEMENT

An extra disposable bag is located in the lower receptacle section of the Power Unit. With a six gallon capacity, under normal conditions the bag requires changing approximately twice a year.

If the bag is filled, you will notice a complete loss of vacuum in the system. Unless this loss of vacuum is caused by a blockage in the system, changing the bag will correct the problem.

To remove the disposable bag, lift the two canister latches and remove the lower canister. Grasp the edges of the bags' collar and pull down. Do not pull on the bag. The bag will slide off easily.

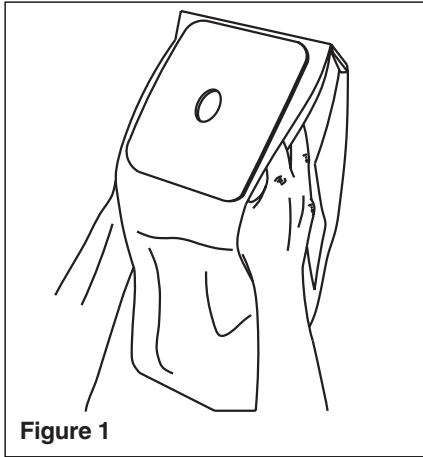 


Figure 1

### INSTALLING A NEW BAG

1. Open bag out at pleats.
2. Grasp collar where indicated and insert over bag adapter. Be careful not to tear the bag.
3. Be sure the collar is positioned above the lugs on the bag adapter.

A set of three (3) replacement bags (Model 391) and a replacement filter may be purchased from your local NuTone Sales Outlet. For the name of your nearest NuTone Sales Outlet, call NuTone, toll free at 1-800-543-8687.

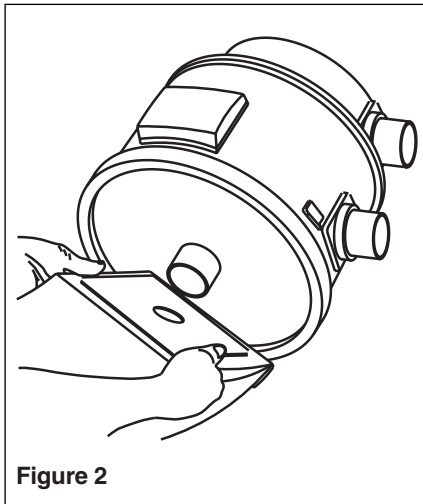 


Figure 2

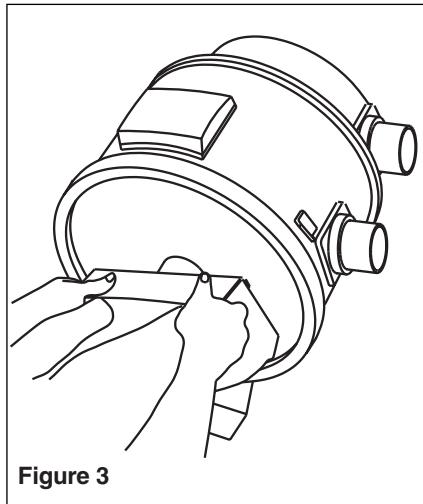 



Figure 3

## POWER & TURBINE BRUSHES AND HOSES


 
### CT600 DELUXE ELECTRIC POWER BRUSH

Motorized 14" roller bar with two rows of nylon brushes and replaceable beater bar provides extra cleaning power. Features 4-position height adjustment, toe release button, overload protection reset button and built-in light to maximize cleaning visibility. Includes two chrome-plated steel wands. Soft gray.

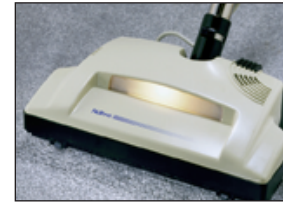


### 599 – ELECTRIC POWER BRUSH

Wide motorized roller bar beats dirt from carpet then picks it up with revolving nylon brushes. Features edge-cleaning, built-in light. Includes two chrome-plated steel wands with retainers for 4-ft. Power Brush Cord. Cord, with bi-pin plug, connects 599 to current-carrying hose models or, model 599-CS extension cord.



### 343G – TWIN-TURBINE AIR-DRIVEN BRUSH

 Air-driven brush. Lightweight, durable and self-adjusting to any carpet, the Turbine Brush requires no separate power cord or electrical connection.

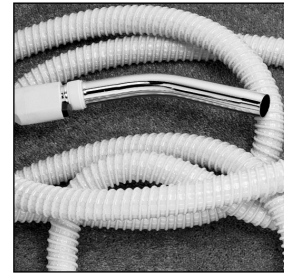

### CH230 – HIGH PERFORMANCE HOSE

1 3/8" diameter hose reduces turbulence and provides freer air flow. A switch on the end of the 30' hose lets you turn power unit on and off as you clean.

NOT SHOWN:

#### 372 – STANDARD HOSE

Efficient Standard Hose for use with NuTone Cleaning Tools. Rotary control on handle regulates suction. 32'.

#### 599-CS – POLARIZED 35-FOOT EXTENSION CORD

Use to connect Model 599 Power Brush cord to electrical outlet. Strappings included for attaching cord to CH230, CH115 or 372 Hoses.



### CH310 – STANDARD CURRENT-CARRYING HOSE

30' Standard Current-Carrying Hose eliminates the need for the 599-CS Extension Cord. Can be used with all NuTone Cleaning Tools.

NOT SHOWN:

#### CH115 – ECONOMY CRUSHPROOF HOSE

Durable crushproof hose is designed to provide good flexibility with strength...springs back immediately to original shape. 30' long.

\*All NuTone hoses include convenient storage hanger.



### CH510 – DELUXE CURRENT-CARRYING HOSE

30' large diameter Deluxe Current-Carrying Hose for use with the CT600 or 599 Power Brush. Eliminates the need for 599-CS Extension Cord. Hose features bi-pin plug at one end to connect to Power Brush Cord. Cord at other end plugs into wall outlet. Comfort-grip handle, three position on/off switch provides fingertip control of entire system. Adjustable lever regulates air movement to suit cleaning needs. Can be used with all NuTone Cleaning Tools.

**CH610 Same Model only with Direct-plug connection at wall for use with CI390 Series Electrified Inlet.**

## TOOL SETS & ACCESSORIES

NuTone offers a choice of three Tool Sets, each containing: Combination Floor/Rug Tool, Wand(s), Dusting Brush, Upholstery Tool, Crevice Tool and Tool Caddy. These tools are similar to the tools provided with any vacuum cleaner and are used for similar cleaning chores. Used with the Central Cleaning System Hose, they allow you to conveniently and efficiently clean numerous areas in your home, including walls, and surfaces above the floor.

The Floor Rug Tool provided with the Deluxe Tool Set moves from carpeted to non-carpeted areas without adjustment. With the Standard and Basic Tool Sets, a single-pedal toe-touch lever raises or lowers the brush as you go from carpets to bare floors and back again. Each Floor/Rug Tool has a 360° universal swivel to permit you to move the tool freely and easily as you clean under, around and on top of surfaces. Tools are handsome European styling in black or gray as shown.



### CK230 DELUXE TOOL SET

Floor/Rug Tool has front and rear wheels to move smoothly across surfaces. Includes Ratcheting Wand for added convenience. Brushes are natural fiber. Crevice tool is notched to provide continuous air flow. Cloth tool storage bag included.



### CK120 STANDARD TOOL SET

Floor/Rug Tool has dual wheels for smooth performance and even air flow. Two chrome steel wands included. Brushes are nylon bristles. Cloth tool storage bag included.



### CK110 BASIC TOOL SET

Floor/Rug Tool moves from floor to carpet with single pedal operation. Two durable ABS plastic wands included. Brushes are nylon bristles.



### CT155B HARD FLOOR TOOL

11 3/4" brush efficiently cleans hardwood flooring, tile and other hard floor surfaces. Two rows of soft bristles, dual wheels, and swivel neck.



### CT143B UNIVERSAL DUSTING BRUSH

Versatile elongated dusting brush will change the way you dust. Great for desks, bookshelves, blinds, etc. Soft nylon bristles.



### CT330B TURBINE STAIR TOOL

Easy to handle, hand-held stair brush, perfect for deep cleaning cars, steps, and tight places. Durable ABS plastic housing, covered belt.



### CA130 HOSE SOCK

Protects furniture, walls and woodwork. Fits all 30' - 32' central cleaning hoses, 1 1/4" - 1 3/8" in diameter. Purchase hose separately.

### CT109B PET BRUSH

(Shown at right) Nylon bristles for gentle grooming. Removable bristles for easy cleaning.



## CLEANING THE SECONDARY FILTER

A secondary safety filter, located between the motor and the soil bag, provides protection against dirt being pulled into the motor if the disposable bag should accidentally be torn. This filter should be checked and cleaned, if necessary, when replacement bags are installed. Simply brush filter clean. If the filter is excessively soiled, wash in a mild detergent and thoroughly dry before replacing.

**IMPORTANT: Operation of the Power Unit without the secondary safety filter installed will void the warranty.**

### REMOVING FILTER

Remove lower receptacle and disposable bag. Using tab on edge of filter, pull and loosen filter from canister wall. Then, carefully pull filter off of bag adapter.

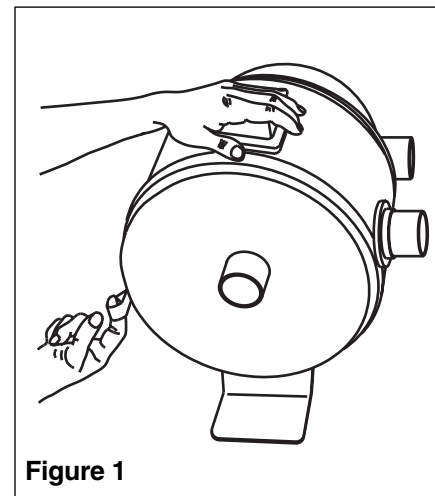 


Figure 1

### REPLACING FILTER

Make sure the filter is installed so that the pull tab is on the outside and accessible for future filter removal.

Align hole in center of filter with opening in the middle of the bag adapter. Press filter upward until center hole locks over lugs on bag adapter. Press filter's outer edge until it is secure against rib inside canister.


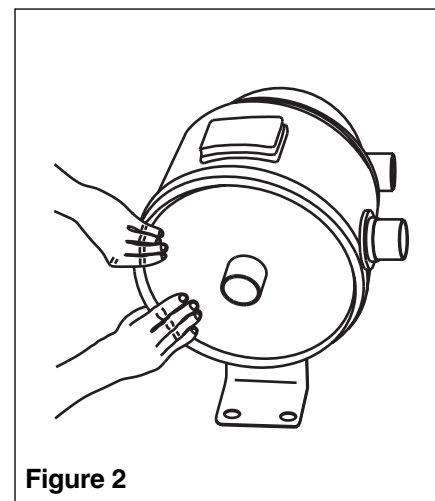 


Figure 2

# TROUBLESHOOTING GUIDE
 
# Read Before Calling Service Center

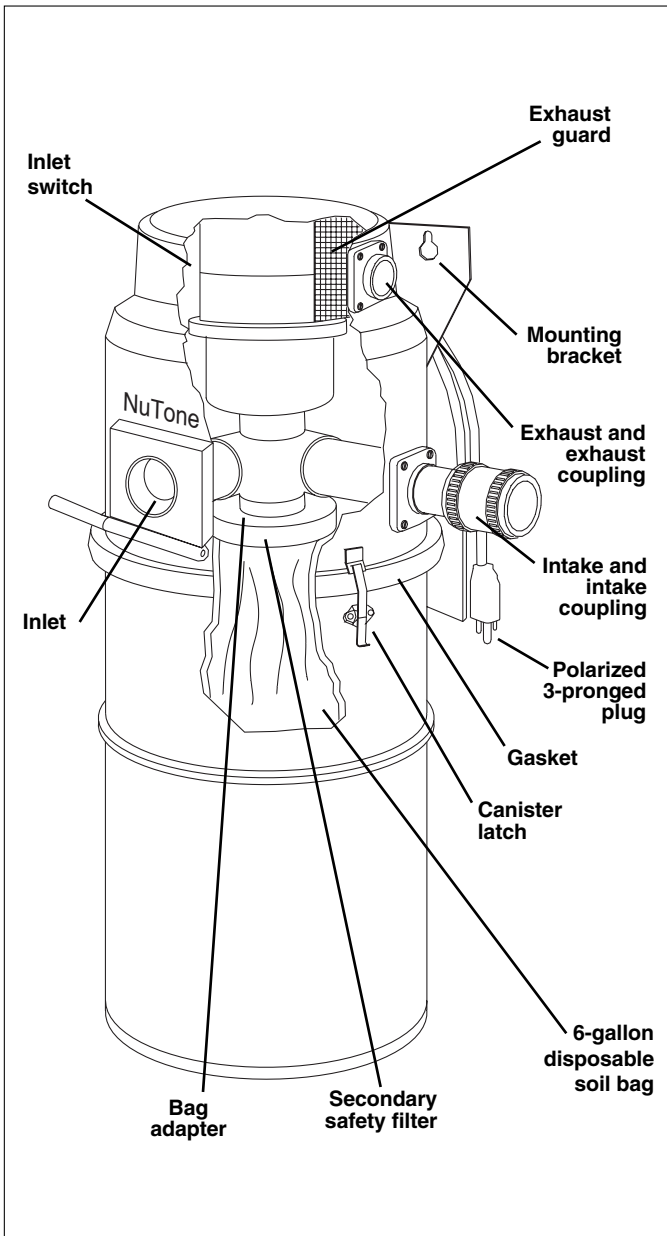

**NUTONE MODEL CV-352 SHOWN.  
YOUR ACTUAL UNIT MAY VARY IN APPEARANCE.**

Trouble	Possible Cause	Possible Remedy
1. Loss or decrease of vacuum occurs.	1a. Disposable bag filled.	1a. Remove disposable bag and install replacement. <b>Note:</b> Check secondary filter for possible dirt and dust accumulation and wash to clean if necessary.
	1b. Obstruction in the hose. A blockage in the hose can be determined by inserting the hose into any Wall Inlet and, while Power Unit is running, check each additional inlet for normal suction by holding the palm of your hand over the open inlet. If normal suction is felt at all other inlets, insert the hose into a second inlet. If the blockage still exists it is located in the hose. However, if the blockage does not occur when the hose is changed, the blockage is probably located in the tubing system leading to the original inlet.	1b. Disconnect the hose from the wall Inlet and insert a blunt instrument into the hose – slightly smaller in diameter – such as a flexible garden hose. Push the garden hose through the cleaning system hose until the obstruction has been cleared.
	1c. Obstruction in the tubing system inside the walls.	1c. Insert hose end into any inlet with Power Unit running, place the palm of your hand over the opposite end of the hose. When you can feel the suction increase, hold your hand over the hose end for a few seconds and then quickly remove your hand. This procedure repeated several time should clear the obstruction. If the blockage is not cleared, service will be necessary.
	1d. Wall Inlet cover not properly sealed.	1d. Check all Wall Inlet covers to be sure they are closed and sealed tightly.
2. Power unit does not start.	2a. Defective inlet. Check other Wall Inlets.	2a. Replace defective Wall Inlet.
	2b. Thermoprotector has been activated.	2b. Check the overload protector button located on the front of the Power Unit. (Push to reset system.)
	2c. Blown fuse or tripped circuit breaker.	2c. Replace fuse or reset circuit breaker.
3. Power unit fails to stop when the hose is removed.	3a. An electrical short has occurred somewhere in the system.	3a. A complete check of all Wall Inlet and Power Unit low voltage control lead connections (external yellow leads). Turn system off by removing fuse or tripping circuit breaker at house fuse box.