

Panasonic

KX-T7000

Quick Guide

KX -TA 624 SERIES

Installed by :

Contents

How to use this guide 3

Basic Operation 3

Other Features :

Absent Messages 4
Account Code Entry 4

Background Music 4
Busy Station Signaling (BSS) 4

Call Forward 4
Camp – on (Call Back on Busy) 4
Call Hold 5
Call Hold, Retrieval 5
Call Log, Incoming 5
Call Log Lock, Incoming 5
Call Park 5
Call Pickup (Directed, Group, Deny) 5
Call Retrieving: Tel. Answer Machine 5
Call Splitting 5
Call Waiting 5
Call Waiting (Central Office) 6
Conference 6

Data Line Security 6
Direct Inward System Access (DISA) 6
Do Not Disturb 6
Do Not Disturb (DND) Override 6
Door Opener 6
Doorphone Call 6

Electronic Station Lock 7
Executive Busy Override 7
External Feature Access 7

Flash (CO Line release) 7

Handsfree Answer Back 7

Log In / Log Out 7

Message Waiting 7
Microphone Mute 8

Operator Call 8

Outward Dialing Line Access 8

Paging 8
Personal Speed Dial 8
Pick up (Hot Line) (Standard Tel.) 8
Pulse to Tone Conversion 8

Redialing 9
Redial Saved Number 9
Room Monitor 9

Secret Dialing 9
Station Feature Clear 9
Switching to Tone Alert 9
System Speed Dial 9

Time Service (Mode Check) 9
Timed Reminder 10

Voice Mail Integration 10

Walking Class Of Service 10

Operator / Manager features

Date and Time 10
Electronic Station Lockout (Cancel) 10
DISA Outgoing Message 10
Remote Station Lock 10
Time (Day/Night/Lunch) Modes 11
Timed Reminder, Remote 11
Extension Password 11

Extension Programming

Call Waiting Tone Type 11
Flexible Button Programming 11
Intercom Alert Mode 12
CO Line Ringing Selection 12
Preferred Line Assignment Incoming
 No Line Preference 12
 Ringing Line Preference 12
 Prime Line Preference 12
Preferred Line Assignment Outgoing
 No Line Preference 12
 Idle Line Preference 12
 Prime Line Preference 12
Extension Number Confirmation 12
Station Programming Data, Default 12

How to use this guide

| Operation | Description |
|---------------------|--|
| [Off - Hook] | Press SP-Phone or Monitor or Lift the telephone handset |
| [REDIAL] | Press the REDIAL button, or the button programmed with the REDIAL function |
| [Talk] | Action required by the user is shown in brackets |
| [CO or DSS] | Button programmed to access the External Line (<i>Central Office CO</i>) or an Ext. |
| [PROG] | Move Program Switch on the rear of the Telephone to 'PROGRAM' |
| [3 3] | Dial the digits in the brackets (<i>i.e. Dial 3 twice on the keypad</i>) |
| [Tel. / Ext. No.] | Dial an External phone No. or Extension number (<i>An External phone No. will have to be prefixed with the access code 9 (Automatic Line Access) or 81 ~ 86 (for CO Line Groups 1 ~ 6)</i>) |

Note :

- If a Feature requires the handset to be taken **Off – Hook**, it must be replaced after the Feature has been programmed or used.
- If programming requires the switch at the rear of the Telephone to be moved to the '**PROGRAM**' position, it must be returned to the '**SET**' position after the programming has been completed.

Basic Operation Description

| Description | Key sequence |
|--|--|
| MAKING A CALL | |
| Intercom Calling (<i>Calling another extension</i>) | [Off - Hook] Ext. No.] <i>or</i> [Off - Hook] DSS (<i>DIRECT STATION SELECT</i>)] |
| Outgoing Call (<i>Making a call to the Central Office</i>) | [Off - Hook] CO] <i>or</i> [Off - Hook] 9 (<i>for any available CO line</i>)] <i>or</i> [Off - Hook] 81 ~ 86 (<i>for Trunk Groups 1 ~ 6</i>)] |
| RECEIVING A CALL | |
| CO or INTERCOM LED flashes rapidly on Ext. (<i>With or Without Ringing</i>) | [Off - Hook] CO or INTERCOM] (<i>press the flashing LED if the call does not automatically connect to your Ext.)</i> |
| TRANSFERRING A CALL | |
| Transferring a call to another Extension (<i>Intercom or CO Line</i>) | [TRANSFER] Ext. / Tel. No.] [Announce Call - to the Called party (<i>optional</i>)] [Replace your handset (<i>to transfer the call</i>)] (<i>if the called party does not wish to accept the call, you can return to the calling party by pressing [INTERCOM or CO]</i>) |
| USING A DSS BUTTON OR DSS CONSOLE | |
| To Transfer a call (<i>Note: Your Installer will have to set the transfer mode</i>) | Manual transfer : [TRANSFER] DSS] <i>or</i> Automatic transfer : [DSS] |

Feature Description

| Description | Key sequence |
|--|--|
| ABSENT MESSAGE | |
| The Caller to your Ext. can receive a pre-programmed absent message (<i>Caller must have a System phone with LCD. i.e. KX-T7130/7030</i>) | |
| 'Will Return Soon' | [Off - Hook] [7 5 1 #] |
| 'Gone Home' | [Off - Hook] [7 5 2 #] |
| 'At Ext x x x' | [Off - Hook] [7 5 3] [Ext. No.] [#] |
| 'Back At HH : MM: AM / PM' | [Off - Hook] [7 5 4] [01 ~ 12 (Hour)] [00 ~ 59 (Min.)] [0 / 1 (AM / PM)] [#] |
| 'Out until MM / DD' | [Off - Hook] [7 5 5] [01~12 (Month)] [01 ~ 31 (Day)] [#] |
| 'In a meeting' | [Off - Hook] [7 5 6 #] |
| 'Canceling the pre-programmed message' | [Off - Hook] [7 5 0 #] |
| ACCOUNT CODE ENTRY | |
| A 4 digit Account code can be entered to identify the call, for client billing purposes (<i>The Call details plus Account Code can be printed out by connecting the SMDR output to a printer</i>) | Before Dialing : [Off - Hook] [CO or 9 (Line Access)] [FWD/DND or PAUSE] [Account Code] [Tel. No.] During a Conversation : [FWD/DND or PAUSE] [Account Code] |
| □ The [FWD/DND] button can be replaced by dialing [4 9] on the keypad and [PAUSE] by [* *] | |
| BACKGROUND MUSIC (BGM) | |
| Allows you to listen to Background music from the External Music Source through a System phone's speaker | [On - Hook] [1] |
| BUSY STATION SIGNALING (BSS) | |
| Sends Call Waiting Tone to a dialed Busy Extension (<i>to inform the Ext. you are waiting</i>) | [Off - Hook] [Ext. No.] [Hear Busy] [1] [Wait for answer] |
| CALL FORWARDING (FWD) | |
| Call Forward - All Calls | [FWD/DND] [1] [Ext. No.] [#] |
| Call Forward - Busy / No Answer | [FWD/DND] [2] [Ext. No.] [#] |
| Call Forward - to an Outside CO Line (<i>Forwarding to an External Tel. No.</i>) | [FWD/DND] [3] [Access Code 9 or 81~86] [Tel. No.] [#] |
| Call Forward - Follow Me (<i>Setting FWD from the FWD destination Ext.</i>) | [FWD/DND] [5] [Your Ext. No.] [#] |
| Call Forward - Follow Me, CANCEL (<i>Canceling from the destination Ext.</i>) | [FWD/DND] [8] [Your Ext. No.] [#] |
| Call Forward - CANCEL | [FWD/DND] [0] [#] |
| □ The [FWD/DND] button can be replaced by a dialing [7 1] on the keypad | |
| CAMP - ON (Call Back on Busy) | |
| Rings your extension back, when the dialed Busy Extension or CO Line becomes free (<i>making or receiving a call cancels this feature</i>) | On hearing Busy Tone : [6] [Hang-up] Canceling : [Off - Hook] |

Feature Description (Continued)

| Description | Key sequence |
|--|---|
| CALL ON HOLD - PLACEMENT | |
| Hold - standard (Any Ext. can pick up the Held call) | [HOLD] |
| Hold - exclusive (Only the Ext. which placed the call on Hold can retrieve it) | [HOLD] [HOLD] |
| CALL ON HOLD - RETRIEVAL | |
| Retrieve a CO call held by another Ext. (not flashing on your Ext.) | [Off - Hook] [5 3] [CO Line Number] |
| Retrieve an INTERCOM call held by another Ext. (not flashing on your Ext.) | [Off - Hook] [5] [Ext. No.] |
| CALL LOG, INCOMING (Requires optional equipment KX-TA62493) | |
| Logs the last 20 calls received | [Off - Hook] [7 3 7 1 #] |
| Logs the first 20 calls received then stops recording | [Off - Hook] [7 3 7 0 #] |
| CALL LOG LOCK, INCOMING | |
| Prevents a User reading your Incoming call log (4 digit Lock Code 0000 to 9999) | [Off - Hook] [7 7] [Lock Code] [Lock Code] [#] |
| Cancel the 4 digit Lock Code | [Off - Hook] [7 7] [Lock Code] [#] |
| CALL PARK | |
| Placing a call in a Parking Zone | [HOLD] [2 2] [0 ~ 9 (Parking Zone)] |
| Retrieving a Call from a Parking Zone | [HOLD] [2 2] [0 ~ 9 (Parking Zone)] |
| CALL PICKUP | |
| Call Pickup, Directed (Pickup a Call from a specific extension) | [Off - Hook] [4] [Ext. No.] [Talk] |
| Call Pickup, Group (Pickup a Call from your Pick-up Group) | [Off - Hook] [4 0] [Talk] |
| Call Pickup - Deny (Prevents your calls being intercepted) | Set : [Off - Hook] [7 2 1 #] Cancel : [Off - Hook] [7 2 0 #] |
| CALL RETRIEVAL FROM Telephone Answering Machine (TAM) | |
| Allows interception of a Call already answered by the Telephone Answer Machine (TAM) | [Off - Hook] [TAM Ext. No.] [Hear Busy] [4] [Talk] |
| CALL SPLITTING | |
| Allows you to talk privately with two calls and alternate between the two parties. | [HOLD] [CO or INTERCOM] |
| CALL WAITING | |
| Activates Call Waiting for CO Calls | Set : [Off - Hook] [7 3 1 1 #] Cancel : [Off - Hook] [7 3 1 0 #] |
| Activates Call Waiting for Extension Calls | Set : [Off - Hook] [7 3 2 1 #] Cancel : [Off - Hook] [7 3 2 0 #] |

Feature Description (Continued)

| Description | Key sequence |
|---|--|
| CALL WAITING FROM THE CENTRAL OFFICE | |
| To connect with the CO caller after hearing CO call waiting tone (<i>Network service</i>) | [FLASH] [Talk] |
| CONFERENCE | |
| During a Call | [CONF] [Ext. or Tel. No.] [Talk] [CONF] (<i>Conference Established</i>) |
| During a Call (<i>Standard Telephone</i>) | [Flash Hook Switch] [Ext. or Tel. No.] [Talk] [Flash Hook Switch] [3] (<i>Conference Established</i>) |
| To Terminate One Party of the conference | [CO LINE or INTERCOM] (<i>of the party to remain connected</i>) |
| □ Any Telephone may leave the Conference by hanging up. | |
| CONFERENCE UNATTENDED (must be enabled by system programming) | |
| To leave an established Conference with Two External parties. | [CONF] (<i>Duration of conference is controlled by phone system</i>) |
| To rejoin Conference. | [CO (<i>Flashing Green</i>)] |
| DATA LINE SECURITY (i.e. using a modem) | |
| Prevents Interruptions while on a call such as Call Waiting, Hold Recall, etc. | Set : [7 3 0 1 #] Cancel : [7 3 0 0 #] |
| DISA OPTION (requires optional equipment KX-TA62491) | |
| See Detailed Description | User Manual (<i>Page 3-50 Telephone Features</i>) |
| DO NOT DISTURB | |
| Prevents Incoming Calls to your Ext. | Set : [FWD/DND] [4 #] Cancel : [FWD/DND] [0 #] |
| □ The [FWD/DND] button can be replaced by a dialing [7 1] on the keypad | |
| DO NOT DISTURB OVERRIDE | |
| Overrides DND (Do Not Disturb) settings. | [Off - Hook] [Ext. No.] [2] [Talk] |
| 'DOOPHONE CALL' (requires optional equipment KX-TA62460) | |
| Answering and Unlocking a received 'Doorphone' Call | [Off - Hook] [5 (<i>to unlock</i>)] |
| DOOR OPENER | |
| Unlocking the door | [Off - Hook] [5 5] [Door Opener No. (<i>1 to 4</i>)] |
| DOORPHONE CALL | |
| To Call a Doorphone | [Off - Hook] [3 1] [Doorphone No.] [Talk] |

Feature Descriptions (Continued)

| Description | Key sequence |
|---|--|
| ELECTRONIC STATION LOCK | |
| Prevents Outgoing Calls at your Ext. (4 Digit Lock Code 0000 ~ 9999) | Lock : [Off - Hook] [77] [Lock Code] [Lock Code] [#] Unlock : [Off - Hook] [77] [Lock Code] [#] |
| EXECUTIVE BUSY OVERRIDE – Extension (Feature has to be enabled by programming) | |
| Allows you to connect to (Barge) an existing Ext. to Ext. call | [Off - Hook] [Ext. No.] [2] [Talk] |
| EXECUTIVE BUSY OVERRIDE – CO Line (Feature has to be enabled by programming) | |
| Allows you to connect to (Barge) an existing Ext. to CO call | [Off - Hook] [CO] [Talk] |
| To disconnect one of the parties on the Barged call | [INTERCOM or CO] (of the Party to remain connected) |
| EXECUTIVE BUSY OVERRIDE DENY | |
| Prevents Executive Override | Set : [Off - Hook] [7330#] Cancel : [Off - Hook] [7331#] |
| EXTERNAL FEATURE ACCESS | |
| Allows Access to CO Line or Host PBX Features | [FLASH] [Enter Feature Code] |
| FLASH | |
| Disconnects the current call and reconnects to make a new call without hanging up | [FLASH] (System Programming may require changing) |
| HANDSFREE ANSWER BACK | |
| Intercom calls are automatically answered in Handsfree mode | Set : [AUTO ANSWER] (LED Flashes) Cancel : [AUTO ANSWER] (LED Goes out) |
| LOG -IN / LOG - OUT | |
| Allows you to Log-out of a Hunting or Ring Group | [Off - Hook] [Log-In / Log - Out] or [Off - Hook] [7360# (Log - In)] [Off - Hook] [7361# (Log - Out)] |
| MESSAGE WAITING LAMP | |
| 'Light' the MESSAGE Button on another Ext. indicating you wish to be called | [Off - Hook] [701] [Ext. No.] [#] |
| 'Light' the MESSAGE Button on a Dialed Ext. when it is Busy or No Reply | [Off - Hook] [Ext. No.] [MESSAGE] |
| Replying to a 'Message' left at your Ext. | [Off - Hook] [MESSAGE] |
| Reviewing Your 'Messages' | [MESSAGE] (Repeated Pressing Scrolls Messages) |
| Cancels the 'Message' Light at another Ext. | [Off - Hook] [702] [Ext. No.] [#] or [Off - Hook] [Ext. No.] [MESSAGE] [MESSAGE] |
| Cancels all 'Messages' left at your Extension | [Off - Hook] [700#] |

Feature Descriptions (Continued)

| Description | Key sequence |
|---|---|
| MICROPHONE MUTE | |
| This mutes the microphone only | [MUTE] (LED flashes red slowly) |
| OPERATOR CALL | |
| To Call the System Operator | [0] |
| OUTGOING CO LINE ACCESS | |
| Automatic (seizes 1 st available CO Line) | [Off - Hook] [9] |
| Line Group (seizes a CO from the Line Group) | [Off - Hook] [8] [1 ~ 6 (Group No.)] |
| Direct Access (seizes chosen CO Line) | [CO] |
| PAGING | |
| Paging - All * | [Off - Hook] [33 *] [Talk] |
| Paging - External * | [Off - Hook] [34] [Talk] |
| Paging - All Groups * | [Off - Hook] [330] [Talk] |
| Paging - One Group * | [Off - Hook] [33] [1 ~ 8 (Group No.)] [Talk] |
| Paging with Transfer (Holds an Incoming Call ready to Transfer after the Page is Answered) | [I/C Call] [TRANSFER] [Page (i.e. All - 33*)] [Wait for answer] [Talk] [Replace your Handset to connect the Incoming Call to the Answered Page] |
| Note * : After Paging you can wait [Off - Hook] for an Answer to your Page | |
| PAGING FEATURES | |
| Paging – Answer (Answering a Page) | [Off - Hook] [43] [Talk] |
| Paging – Deny (Prevents Paging on the system phone speaker) | Set : [7341#] Cancel : [7340#] |
| PERSONAL SPEED DIALING | |
| Storing (Up to 10 No's. can be stored at each Ext.) | [Off - Hook] [2 *] [Personal Speed Dial No.] [Tel. No.] [#] |
| Dialing | [Off - Hook] [#] [Personal Speed Dial No.] |
| Checking the Stored Numbers | [Off - Hook] [3 *] [Personal Speed Dial No.] |
| PICKUP DIALING (HOT LINE) (Standard telephone only) | |
| Storing a phone number | [Off - Hook] [742] [Tel. No.] [#] |
| Activating | Set : [741#] Cancel : [740#] |
| <input type="checkbox"/> Automatically Dials the stored number when the telephone is taken [Off - Hook] | |
| PULSE to TONE CONVERSION | |
| Allows you to Switch from Pulse to Tone Dialing (when required i.e. Voice Mail, etc.) | [* #] (Tone Mode) |

Feature Descriptions (Continued)

| Description | Key sequence |
|--|---|
| REDIALING | |
| Automatic Redial (<i>Repeats the redial attempt a Pre-programmed No. of Times</i>) | [SP-PHONE or MONITOR] [REDIAL or SAVE] |
| Last Number Redial | [REDIAL (or dial [##] or [8 0] on the keypad)] |
| REDIAL SAVED Number | |
| Storing a number for redial (<i>During a conversation</i>) | [AUTO DIAL] [SAVE] |
| Dialing the Saved Number | [Off - Hook] [SAVE] |
| ROOM MONITOR | |
| Setting (<i>At the Monitored Telephone</i>) | [Off - Hook] [7 3 5 1 #] [Replace Handset] [AUTO ANSWER] |
| Monitoring | [Off - Hook] [MUTE] [Ext. No.] [Listen] |
| Paging a monitored room | [Off - Hook] [MUTE] [Ext. No.] [Listen] [Off - Hook or MUTE] [Talk] |
| Temporarily canceling the Monitoring | [AUTO ANSWER / MUTE] |
| Canceling | [Off - Hook] [7 3 5 0 #] |
| Through a Doorphone | [Off - Hook] [MUTE] [3 1] [1 ~ 4 (Doorphone No.)] [Listen] |
| <input type="checkbox"/> Doorphone access tone can be eliminated through programming <input type="checkbox"/> Access tone is not sent to the Monitored System Phone <input type="checkbox"/> System Programming sets Monitoring Extensions <input type="checkbox"/> Not available on KX-T7050 / KX-T7055 telephones | |
| SECRET DIALING | |
| When Storing the Telephone No. | Press the [INTERCOM] Before and after digits required to be hidden from the display |
| STATION FEATURE CLEAR | |
| Resets User Station Features | [Off - Hook] [7 9 #] |
| SWITCHING TO TONE ALERT | |
| An Extension Programmed for Voice Alert can be changed to Tone Alert | [Off - Hook] [Ext. No.] [Confirmation Tone] [*] [Ring Back Tone] |
| SYSTEM SPEED DIAL | |
| Dialing System Speed Dial Nos. | [Off - Hook] [AUTO DIAL or *] [Speed Dial No.] |
| TIME SERVICE (Day / Night / Lunch Mode Check) | |
| Confirming the current mode | [Off - Hook] [#] (Displayed for 3 sec.) |

Feature Descriptions (Continued)

| Description | Key sequence |
|--|--|
| TIMED REMINDER (from the Extension) | |
| Alarm / Reminder Call – Set (<i>The System will Ring the Ext. at the time set</i>) | [Off - Hook] [7 6] [01 ~ 12 (<i>Hour</i>)] [00 ~ 59 (<i>Min.</i>)] [0 / 1 (<i>AM / PM</i>)] [1 (<i>next occurrence</i>) or 2 (<i>daily recurrence</i>)] [#] |
| Alarm / Reminder Call - Cancel | [Off - Hook] [7 6 2 #] |
| Alarm / Reminder Call – Confirmation | [Off - Hook] [7 6 3 #] |
| VOICE MAIL INTEGRATION | |
| Forwarding Calls to Voice Mail (<i>Use setting B. If your Voice Mail System requires # 6 before your ext. I.D.</i>) | [Off - Hook] [FWD/DND] [91(A) or 92 (B)] [#] |
| Retrieving your Messages | [Off - Hook] [MESSAGE or Voice Mail Ext. No.] |
| Canceling | [Off - Hook] [FWD/DND] [90] [#] |
| □ The [FWD/DND] button can be replaced by a dialing [7 1] on the keypad | |
| WALKING Class Of Service | |
| Allows you to use your COS at another Ext. (<i>4 Digit Password set by the System Manager</i>) | [Off - Hook] [7 *] [Password] [Your Ext. No.] [#] [Confirmation Tone] [Tel. No.] |

Operator / Manager Features

| Description | Key sequence |
|--|--|
| DATE and TIME SETTING | |
| Setting the System Clock (<i>Year setting : i.e. 98 = 1998 , 00 = 2000</i>) | [PROG] [0] [2 Digit (<i>Year</i>)] [01~12 (<i>Month</i>)] [01~31 (<i>Day</i>)] [0 (<i>Sun</i>) ~ 6 (<i>Sat</i>)] [01 ~ 12 (<i>Hour</i>)] [00 ~ 59 (<i>Min.</i>)] [0 / 1 (<i>AM / PM</i>)] [STORE (<i>AUTO DIAL / STORE</i>)] |
| ELECTRONIC STATION 'LOCKOUT' – CANCEL ALL | |
| Cancels 'Lockout' at all Ext. | [PROG] [8] [STORE] |
| DISA OUTGOING MESSAGE | |
| Recording the Message (<i>Operator function</i>) | [PROG] [9] [Off - Hook] [0 (<i>Both OGM 1 & 2</i>) or 1 (<i>OGM 1</i>) or 2 (<i>OGM 2</i>)] [Record Message] [STORE] |
| Play the Outgoing Message | [PROG] [9] [3 (<i>OGM 1</i>)] or [4 (<i>OGM 2</i>)] [STORE] [Message Plays] |
| REMOTE STATION LOCK CONTROL | |
| Locking an Extension (<i>Prevents outgoing calls</i>) | [Off - Hook] [STATION LOCK (<i>for required Ext.</i>)] (<i>LED Lights</i>) |
| Unlocking | [Off - Hook] [STATION LOCK] (<i>LED Goes out</i>) |

Operator / Manager Features (Continued)

| Description | Key sequence |
|--|--|
| TIME (Day / Night / Lunch) SERVICE SETTING | |
| Changing Mode - Manually | [Off - Hook] [7 8 1 #] (Day Mode) [7 8 2 #] (Night Mode) [7 8 3 #] (Lunch Mode) |
| Returning to Automatic Mode | [Off - Hook] [7 8 0 #] |
| Confirming Current Mode | [Off - Hook] [#] |
| TIMED REMINDER, REMOTE (Wake – Up Call) | |
| Setting | [Off - Hook] [7 6 4] [Ext. No.] [#] [Confirmation Tone] [7 6] [01 ~ 12 (Hour)] [00 ~ 59 (Min.)] [0 / 1 (AM / PM)] [1 (next occurrence) or 2 (daily recurrence)] [#] |
| Cancel | [Off - Hook] [7 6 4] [Ext. No.] [#] [Confirmation Tone] [7 6 2 #] |
| Remote Confirmation (Display system phone only) | [Off - Hook] [7 6 4] [Ext. No.] [#] [Confirmation Tone] [7 6 3 #] |
| EXTENSION PASSWORD SET (Manager only) | |
| The Manager can assign each Ext. a password | [PROG] [7] [System Password] [STORE] [SP-PHONE] |
| Repeat this step for required Extensions | [Password] [STORE] [SP-PHONE (NEXT) or REDIAL (PREV)] |

Extension Programming

| Description | Key sequence |
|---|--|
| CALL WAITING TONE TYPE | |
| Call Waiting Tone Type | [PROG] [5] [1 (tone 1) or 2 (tone 2)] [STORE] |
| FLEXIBLE (CO) BUTTON ASSIGNMENT | |
| Caller ID Indication (Displays call information) | [PROG] [CO Button] [6] [STORE] |
| Caller ID Selection (Selects display: i.e. Name, Tel. No. or CO No.) | [PROG] [CO Button] [7] [STORE] |
| Conference | [PROG] [CO Button] [3] [STORE] |
| Direct Station Select (DSS) | [PROG] [CO Button] [1] [Ext. No.] [STORE] |
| FWD / DND | [PROG] [CO Button] [4] [STORE] |
| Group – CO (G-CO) | [PROG] [CO Button] [#] [Group No.] [STORE] |
| Log-In / Log-Out | [PROG] [CO Button] [8] [STORE] |
| One – Touch Dial | [PROG] [CO or PF Button] [2] [Tel. No. (Transfer clears the present Entry)] [STORE] |

Extension Programming

| Description | Key sequence |
|--|--|
| FLEXIBLE (CO) BUTTON ASSIGNMENT (Continued) | |
| Other - CO (<i>selects any free CO</i>) | [PROG] [CO Button] [*] [STORE] |
| Restoring the MESSAGE Button (<i>If the message button has been changed to another feature</i>) | [PROG] [MESSAGE] [3] [STORE] |
| SAVE (<i>Saves the No. for redial</i>) | [PROG] [CO Button] [5] [STORE] |
| Single - CO | [PROG] [CO Button] [0] [CO Line No.] [STORE] |
| INTERCOM ALERT MODE | |
| Intercom Alert Assignment | [PROG] [4] [1 (Tone) or 2 (Voice)] [STORE] |
| CO LINE RINGING ASSIGNMENT | |
| CO Ringing Selection (<i>Selects which CO's ring on Incoming calls</i>) | [PROG] [3] [Enter the CO line numbers] [STORE] |
| PREFERRED LINE ASSIGNMENT - INCOMING | |
| No Line Preference (<i>Off-Hook does not answer a ringing CO line</i>) | [PROG] [2] [1] [STORE] |
| Ringing Line Preference (<i>Off-hook answers any ring CO line</i>) | [PROG] [2] [2] [STORE] |
| Prime Line Preference (<i>Off-Hook answers assigned Prime line</i>) | [PROG] [2] [3] [CO Line No.] [STORE] |
| PREFERRED LINE ASSIGNMENT - OUTGOING | |
| No Line Preference (<i>Off-Hook does not connect to a CO line</i>) | [PROG] [1] [1] [STORE] |
| Idle Line Preference (<i>Off-hook connects to any idle CO line</i>) | [PROG] [1] [2] [STORE] |
| Prime Line Preference (<i>Off-Hook connects to assigned Prime line</i>) | [PROG] [1] [3] [CO Line No.] [STORE] |
| EXTENSION NUMBER CONFIRMATION | |
| Displays your Jack and Ext. No. | [PROG] [6] [HOLD] |
| STATION PROGRAMMING DATA DEFAULT | |
| Restores all Extension Programming back to the Factory Default settings | [PROG] [# *] [STORE] |

Panasonic Consumer Electronics Company ("PCEC"),
Division of Matsushita Electric Corporation of America
 One Panasonic Way, Secaucus,
 New Jersey 07094

Panasonic Sales Company ("PSC")
Division of Matsushita Electric Puerto Rico, Inc.
 Ave. 65 de Infanteria, Km. 9.5,
 San Gabriel Industrial Park, Carolina,
 Puerto Rico 00985

Printed in the United Kingdom

PSQX1639YA